



US Environmental Rental Corporation

Rentals • Sales • Service


Ion Science PhoCheck+ Calibration

Keypad

Escape Cancel selection, return to prev. screen

Enter selects option and confirms settings

ZERO zeros unit when on 'Display screen'

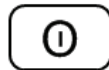

Up Scrolls up or change selection

Down Scrolls down or change selection

Power press to turn on/off



Basic Operation

Press the power button. After a short warm-up, you will see the Main Menu screen:



If you need to start reading immediately, select the middle option (already selected upon start-up) and press

Calibration

From the Main Menu, select . Scroll to and select the Calibration option .

Select the manual option . Select **zero** and press to confirm. Once zero is complete ✓, press . Select **voc** to begin the span calibration and attach your tedlar bag. Press twice to confirm. Once the span calibration is complete ✓, press until your return to the Main Menu.